



POWER ON/OFF- TURNS TV ON/OFF

GUIDE/BACK – PRESS WHILE ON A SHOW TO PULL UP THE GUIDE

WHILE IN THE GUIDE PRESS THREE TIMES TO GET BACK TO CURRENT CHANNEL

WHILE IN THE GUIDE PRESS AND HOLD TO GET TO CURRENT TIME

VOLUME UP/DOWN – CONTROLS THE VOLUME

MUTE – MUTES OR UNMUTES THE TV

SELECT/OK – WHILE IN THE GUIDE; PRESS ONCE TO SELECT CHANNEL (PULLS UP INFO), PRESS A SECOND TIME TO VIEW THE CHANNEL

BLACK CIRCLE – WHILE IN A SHOW GO UP/DOWN BY ONE CHANNEL AT A TIME

WHILE IN THE GUIDE GO UP OR DOWN A CHANNEL BY 1 AT A TIME, PRESS AND HOLD TO SCROLL

FIRESTICK HOME SCREEN- IF YOU PRESS THIS BUTTON IT WILL TAKE YOU OUT OF THE PELLA FIBER TV APP, YOU WILL HAVE TO SELECT THE PELLA FIBER APP AGAIN TO GET BACK IN

REWIND/PLAY/PAUSE/FAST FORWARD- LEFT ARROWS REWIND, PLAY/PAUSE DOES JUST THAT, RIGHT ARROWS FAST FORWARD